




# BEDHEAD - 10 Tone

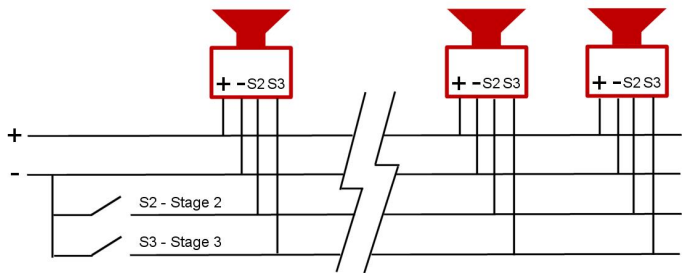

BEDHEAD

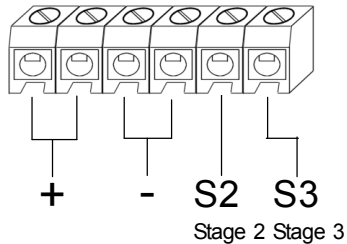

Stage1 tone	Frequency Description	BEDHEAD dB@ 1m	Waveform	Stage2 (S2)	Stage3 (S3)
Tone 1	800/1000Hz @ 0.25 sec Alternating	94dB(A) @1m	[Square wave]	Tone 8	Tone 5
Tone 2	500/1200Hz @ 0.3Hz 0.5 sec Slow Whoop	95dB(A) @ 1m	[Sweeping tone]	Tone 1	Tone 8
Tone 3	1200/500Hz @ 1Hz - DIN / PFEER P.T.A.P.	94dB(A) @ 1m	[Square wave]	Tone 1	Tone 8
Tone 4	544Hz (100mS)/440Hz (400mS) - NF S 32-001	92dB(A) @ 1m	[Square wave]	554Hz	Tone 2
Tone 5	1000Hz Continuous - PFEER Toxic Gas	95dB(A) @ 1m	[Square wave]	Tone 1	Tone 6
Tone 6	Bell	90dB(A) @1m	[Bell curve]	Tone 1	Tone 8
Tone 7	800/1000Hz @ 7Hz Sweeping	94dB(A) @1m	[Sweeping tone]	Tone 5	Tone 1
Tone 8	2400/2900Hz @ 50Hz Sweeping	95dB(A) @ 1m	[Sweeping tone]	Tone 5	Tone 1
Tone 9	420Hz @ 0.625 sec Australian Alert	92dB(A) @ 1m	[Square wave]	Tone 10	Tone 5
Tone 10	500-1200Hz 3.75sec /0.25sec. Australian Evac.	95dB(A) @ 1m	[Sweeping tone]	Tone 6	Tone 5

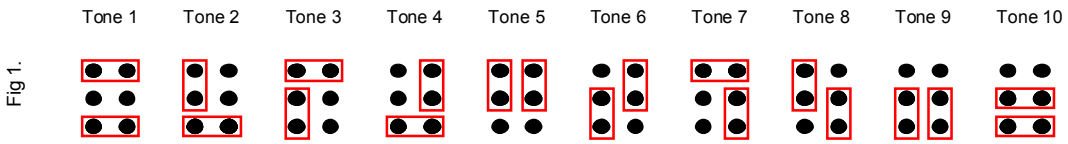

- **Tone selection.** To select a tone place the pin link in the position shown above (Fig. 1).
- **Sélection de la tonalité / réglage des commutateurs.** Pour sélectionner une tonalité, mettre les socles à broches dans les positions illustrées (Fig. 1).
- **Tonwahl / Einstellung der Schalter.** Zur Wahl eines Tons die Klemmenanschlüsse in die angegebenen Positionen bringen (Fig. 1).
- **Selezione tono / regolazione commutatore.** Per selezionare un tono, disporre i collegamenti a cavallotto nelle posizioni indicate (Fig. 1).
- **Seleção de tons / ajuste dos comutadores.** Para seleccionar um tom, coloque as ligações dos pinos na posição mostrada (Fig. 1).
- **Selección Tono / programación interruptores.** Para seleccionar un tono colocar las conexiones de los puentes en las posiciones mostradas (Fig. 1).
- **Toonselectie.** Om een toon te selecteren de pinverbinding in de hierboven aangetoonde positie plaatsen (Fig. 1)
- **Valg af tone.** Valg af en tone sker ved at anbringe stiftforbindelsen i ovenstående position (fig. 1).
- **Velge tone.** For å velge en tone må du plassere stiftledet i posisjonen som vist ovenfor (fig. 1).
- **Tonval.** Välj en ton genom att placera stiftanslutningen i läget som visas ovan (fig. 1).

INSTALLATION INSTRUCTIONS

Voltage : 24vdc  
 Voltage range : 10-30vdc  
 Current mA : 8mA



- Volume Control
- Réglage du volume
- Steuerung der Lautstärke
- Controllo volume
- Controllo do Volume
- Control Volumen
- Volumen kontrol
- Volum eregelling
- Volum kontroll
- Volum kontroll



>90dB(A)@1m

ISN2301-A

No liability is accepted for any consequence of the use of this document. The technical specification of this unit is subject to change without notice due to our policy of continual product development. All dimensions are approximate. This unit is sold subject to our standard conditions of sale, a copy of which is available on request.

Tel : 0044(0)2087438880 mail : sales@e2s.com Fax : 0044(0)2087404200 web : www.e2s.com