

Explosion-proof LED-Light Fitting

ExeLED 1

Adolf Schuch GmbH

Mainzer Str. 172 • D-67547 Worms
+49 6241 4091-0 • info@schuch.de
www.schuch.de

Series e865...



The safety of people and equipment in hazardous areas depends on the observance of all safety standards. Exact knowledge about all applicable regulations and standards is mandatory for installation maintenance and repair of explosion proof equipment, especially

- the determinations of IEC/EN 60079-14 and IEC/EN 60079-17 for maintenance of explosion-proof appliances
- the generally accepted rules of the technical side
- the national rules for prevention of accidents and for safety standards
- the safety instructions of these operating instructions
- the characteristic data on the type plate and the instruction plates

1. Safety Instructions

- Mounting and installation must be done in accordance with the respective regulations.
- The light fitting must be protected against overvoltage, overcurrent, short circuits and other electrical failures.
- The light fitting must be operated in an undamaged condition only.
- The light fitting may only be opened if it has been disconnected from the mains supply completely.
- The non-stationary use of the light fitting as well as any other inappropriate usage is prohibited.
- The operation of the light fitting is allowed within its assessment thresholds only.
- In regard to the minimum and maximum admissible ambient temperature potential sources of cold and heat (e.g. direct heat or solar radiation, cooling units) have to be considered.
- If the light fitting is to be subject to a special application that is influenced chemically, mechanically, thermally or electrically or if the light fitting will be subject to any kind of vibrations, it is highly recommended to consult the Adolf Schuch GmbH before starting the installation.
- Every structural modification will cause dangerous situations and consequently the certification of this light fitting will be null and void.
- **Caution - Risk of electrostatic discharge!
Fitting to be cleaned with damp cloth only!**
- **In areas with risk of accidental electrostatic charge (e.g. by passing by) the light fitting must be protected by appropriate measures.**
- **The light fitting is not allowed to be installed in process areas where strong electrical fields may occur (i.e. HV Sparking Electrodes or Particle Streams). Reason is to avoid any electrostatic charge of the light fitting itself.**
- Replace damaged explosion-proof parts by original spare parts from the Adolf Schuch GmbH only.
- LED-reflector with mounted LED-modules and Electronic control gear of this light fitting must be replaced by A. Schuch GmbH, by a service technician who is instructed from Schuch or by any other person with equivalent qualification only.
It is not allowed to replace the individual LED-modules of this light fitting.

2. Operating Advice

- Because of the chemical resistance use only a damp cloth for cleaning the light fitting. If necessary with a mild and solvent-free cleaning agent.
- Against penetration of humidity into the light fitting a special explosion-proof breathing gland is often quite effective. It is allowed to use a breathing gland which is released by the Adolf Schuch GmbH only. If using a breathing gland please observe the general informations of it's operation instructions.
- In case of light fittings without through-wiring, the connection cable must be inserted on the side that is closest to the connection terminal. If this is not possible, original through-wiring from Adolf Schuch GmbH must be installed subsequently.
- Any application of the light fitting that is incorrect or even forbidden will lead to the fact that the manufacturer's warranty is lost.
- Opening the LED compartment is allowed for repair work only.
- LED are sensitive electronic components. Please ensure that the LED are protected against mechanical and electrostatic attacks whenever the light fitting is open. For this reason the LED must not be touched either.
- Due to harmful gases and other corrosive substances (e.g. ammoniac, sulphur- or chlorine compounds) it may come to damages of the LEDs. Depending on the substance, the concentration, the temperature and the dwell time, damages up to total black-out are possible. This may occur also to fittings with high degree of protection. The suitability of the light fitting for the respective application can only be checked by running a test at site.

- Due to a high inrush current when switching on the light fitting, the number of light fittings which can be connected to a single fused circuit is limited (Possible number of light fittings per circuit breaker see section 3, Technical Data).
- All DALI dimmable light fittings have two additional terminals marked „DA“. Lines to the control terminals must be mains voltage proof.
- In case of versions for connection to group or central battery systems (-J, -C, ZB), the type of operation (Stand-by operation = 0; Maintained operation = 1) must be permanently marked on the type plate of the light fitting (see illustration).

Z	*	****
---	---	------

Delivery status

Z	0	****
---	---	------

Stand-by operation

Z	1	****
---	---	------

Maintained operation

3. Technical Data

Series:	e865 Explosion-proof LED-Light Fitting for operating in hazardous areas of zones 1, 2, 21 and 22.										
Explosion protection:	<ul style="list-style-type: none"> ⊕ II 2 G Ex eb mb q IIC T4 Gb (standard version) ⊕ II 2 G Ex db eb mb q IIC T4 Gb (with isolating switch) ⊕ II 2 G Ex eb mb q IIC T4 Gb (with Schuch monitoring module) ⊕ II 2 G Ex db eb mb q IIC T4 Gb (with isolating switch and Schuch monitoring module) ⊕ II 2 G Ex eb ib mb q IIC T4 Gb (with CEAG/Eaton monitoring module) ⊕ II 2 G Ex db eb ib mb q IIC T4 Gb (with isolating switch and CEAG/Eaton monitoring module) ⊕ II 2 D Ex tb IIIC T80 °C Db 										
Certification:	IBExU 16 ATEX 1008 IECEX IBE16.0010										
Rated voltage:	220...240 V AC; 50 ... 60 Hz (standard version) 220...240 V AC; 50 ... 60 Hz (with Schuch monitoring module) 220...240 V AC; 50 ... 60 Hz (with CEAG/Eaton monitoring module) 176...264 V DC (standard version) 180...264 V DC (with Schuch monitoring module) 176...264 V DC (with CEAG/Eaton monitoring module)										
Isolation class:	I										
Ingress protection:	IP66 (When using an Ex-breathing gland see section 2)										
Ambient temperature:	-30 °C ... +50 °C resp. +55 °C (Standard versions) Special versions and versions for higher ambient temperatures see type plate										
Energy efficiency class:	This light fitting contains a light source of the energy efficiency class: C										
Power consumption:	The power consumption of the LED is dependent on production fluctuations as well as on the service temperature. This is why just reference values can be given as follows: e865F 06L22: 15 W; e865. 12L42: 28 W; e865F 06L42: 28 W; e865. 12L60: 40 W; e865F 06L60: 40 W; e865. 12L85: 54 W										
Possible number of light fittings per circuit breaker:	<table border="1"> <thead> <tr> <th>Type</th> <th>B 10 A</th> <th>B 16 A</th> <th>C 10 A</th> <th>C 16 A</th> </tr> </thead> <tbody> <tr> <td>e865 ..</td> <td>8</td> <td>12</td> <td>13</td> <td>22</td> </tr> </tbody> </table>	Type	B 10 A	B 16 A	C 10 A	C 16 A	e865 ..	8	12	13	22
Type	B 10 A	B 16 A	C 10 A	C 16 A							
e865 ..	8	12	13	22							


Cable entry: Bore: 25 mm -0/+0,5; Wall thickness: front side 5 mm, long side 3 mm
 If supplied: Cable gland with thread size M25 x 1.5
 Sealing range: 8 - 17 mm (for 10 - 17 mm remove the small sealing ring)
 Torques: Connection thread 3 Nm; Pressing screw 2 Nm
 Torque of locking screw: 5 Nm
 See information label on the front page when having special versions!


Connection per terminal: Ampacity: 16 A max. (At maximum current load, a cross section of 2.5 mm² is required)
 Clamping range: 2 x 1 - 4 mm² max.
 Required stripping length: 10 - 11 mm
 See information label on the front page when having special versions!

Locking: Clamp lockings (to be opened by hand) as well as one safety closure at each side (to be opened with a suitable screw driver)

Operation position: in any direction - except upwards light output

Through wiring / Looping: Potential limitations to be considered (see type plate)

Dimensions: (all measures in mm)  It is not allowed to drill through the housing for installation purposes!

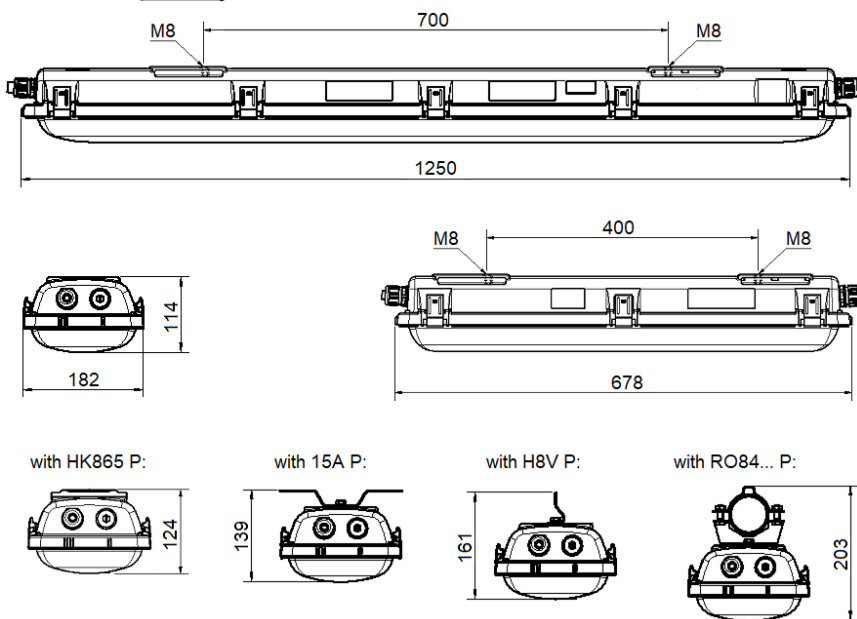

4. Installation




- ▶ The safety of this light fitting is only guaranteed as long as it is operated within its assessment threshold. Installation and maintenance must be done in accordance with the respective regulations!
- ▶ The installation of explosion-proof light fittings must be done by Ex-skilled electricians only!



- ▶ In regard to the minimum and maximum admissible ambient temperature potential sources of cold and heat (e.g. direct heat or solar radiation, cooling units) have to be considered!
- ▶ The application of this light fitting in an explosive dust atmosphere is depending on the properties of the surrounding dust. Please ensure that there will be an adequate difference between the maximum surface temperature of the fitting and the glowing and the ignition temperature of the respective dust!
- ▶ The light fitting must be mounted in the instructed operation position (see section 3, Technical Data)!

4.1 How to open the light fitting

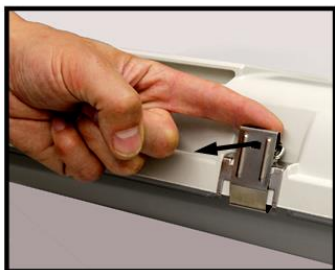


Open outer clamp lockings by hand.



There is a safety closure in the middle at each long side, which can be opened with a screw driver (3 – 6 mm blade size) only (see drawing).



Safety closure

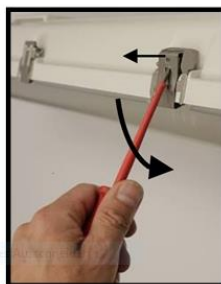

– remove the diffuser with the included reflector.

4.2 Electrical connection

- screw the explosion-proof cable glands and explosion-proof locking screw supplied with the fitting into the borings of the housing by using the lock nuts (Torques see section 3, Technical Data).
- After mounting the light fitting housing insert the connection cable through the explosion-proof cable gland. An inlaid dust protective disc, if existing, must be removed before.
- Fasten the pressing screw of the explosion-proof cable gland (Torque see section 3, Technical Data).



- ▶ For higher ambient temperatures there is only restricted respectively no possibility for looping facility or through-wiring-system. Please follow the information on the type label of the fitting.
- ▶ Outside the light fitting appropriate measures (e.g. pull relief clips) must be taken to protect the connection cable from twist and it must be ensured that no tensile forces react on the wiring and the cable entry!



- ▶ The diameter of the connection cable must correspond to the sealing range of the explosion-proof cable gland (see section 3, Technical Data)!
- ▶ Cable entries, which are not used, must be closed with the enclosed closure plug (see section 3, Technical Data)! An inlaid dust protective disc, if existing, must be removed before.
- ▶ The conductors must not be damaged when skinning resp. stripping the cable!
- ▶ When stripping the cable special attention needs to be paid to the correct length of the conductor end sections (see section 3, Technical Data)!

– Connect the conductors to the right terminals as per marking.



- ▶ It is important to ensure that the bare conductor is fully inserted into the terminal and that no cable insulation is clamped!

4.3 Replacing LED and electronic gear

LED-reflector with mounted LED-modules and Electronic control gear of this light fitting must be replaced by A. Schuch GmbH, by a service technician who is instructed from Schuch or by any other person with equivalent qualification only. The replacement requires prior consultation of the A. Schuch GmbH.

It is not allowed to replace the individual LED-modules of this light fitting.

4.4 How to close the light fitting

- Join diffuser with included reflector and housing together.
- Hook the clamp lockings into the diffuser and fix it.
- After closing the light fitting take care that the whole gasket is effective.


5. Commissioning

Before commissioning this explosion-proof lighting fitting please check and ensure that:

- the light fitting has been installed according to the regulations and in the allowed operating position.
- the explosion-proof cable glands resp. explosion-proof locking screws are securely fixed in the housing (Torques see section 3, Technical Data).
- the pressing screw of every explosion-proof cable gland is tightened with the required torque (Torques see section 3, Technical Data).
- the connection cable has been firmly installed and is not subject to any tension whatsoever.
- the bare conductor is fully inserted into the terminal and that no cable insulation is clamped.
- the light fitting is closed correctly.
- all gaskets are effective.
- the light fitting is not damaged whatsoever.

5.1 Isolation measurement

For measuring the isolating resistance the test voltage must be put on between the outer conductor and the earth conductor or between the neutral conductor and the

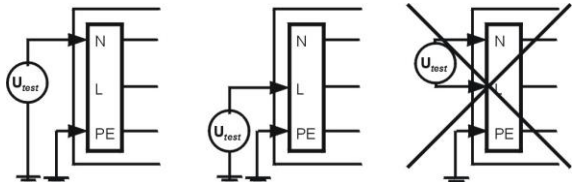


earth conductor only. After finishing the isolation test the conductor between the mains and the light fitting must be reconnected safely. Before starting operation the connection of the neutral conductor must be safe for avoiding any damage whatsoever of the electronic control gear caused by any inadmissible excess-voltage in case of an unbalanced mains load. (see section 5.2)


5.2 Electronic gear in 3-phase-operation

The diagram shows the wiring for light fittings or light fitting groups in 3-phase circuits and with a common neutral conductor N.

If the common neutral conductor is interrupted and voltage is present, then light fittings or groups of light fittings may be exposed to unacceptably high voltages and consequently the electronic gear may be destroyed.

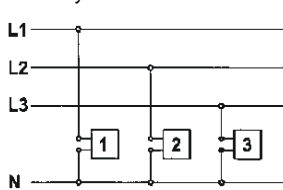

Light fittings with electronic gear

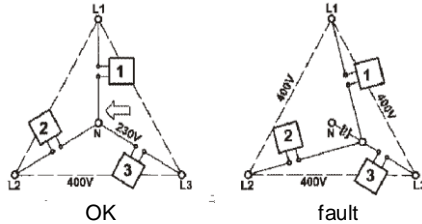

6. Maintenance

6.1 Repair- and maintenance works



- ▶ For applications in dusty atmospheres the light fitting must be cleaned before opening!
- ▶ Ensure that no dust can get into the light fitting when it is open!
- ▶ Replace damaged explosion-proof parts by original spare parts from the Adolf Schuch GmbH only!

Spare Parts:

For spare parts inquiries, in addition to the complete type designation of the light fitting, the serial number of the light fitting must be stated. The serial number is printed on the type plate of the light fitting – on the bottom left.

6.2 Cleaning the light fitting



- ▶ At the plastic parts of the light fitting there is a danger of ignition due to electrostatic charging! For cleaning the housing and cover outside and inside and for cleaning internal plastic components use only cold or lukewarm water (if necessary with a mild cleaning agent) together with a viscose sponge or a soft fibrous-free cloth!

Pay attention to the following in case of application of this light fitting in dusty atmospheres:

Dust deposits show heat-insulating properties and thus reduce the service life of the light fitting. It is necessary to clean the fitting from dust regularly. In case the dust layer may be higher than 5 mm it must be ensured that the surface temperature of the light fitting does not exceed the maximum permissible surface temperature of the specific dust considering the thickness of the dust layer. The dust layer must not exceed 50 mm at any time.

6.3 Regular maintenance work



- ▶ Follow the instructions of section 6.1!

Explosion-proof light fittings need regular maintenance according to the national rules of the country

they are installed. Especially components which are important for the Explosion Category have to be carefully checked. Therefore it must be checked very carefully:

- glass, housing and gaskets for any kind of damages.
- the correct installation and tightness of explosion-proof cable glands and explosion-proof locking screws (Torques see section 3, Technical Data).
- all parts of plastic inside the light fitting to attend to colour change, deformation and damaging.
- the tight fit of the conductor and the condition of the cable insulation.
- that the light fitting is closed correctly and the gasket is effective.



EU-Konformitätserklärung
EU-Declaration of Conformity
Déclaration UE de Conformité

e 865...L...ZB, e 865...L...-1, e 865...L...-C	Explosionsgeschützte Leuchte Luminaire anti-éclabouillant
IBEXU 16 ATEX 1008	IBEXU 16 ATEX 1008 Leuchte (Schuch, GmbH) (0837)
2014/34/EU ATEX-Richtlinie (ABl. L 96 29.03.2014 S. 309)	2014/34/EU ATEX-Richtlinie (ABl. L 96 29.03.2014 S. 309)
2014/34/EU ATEX Directive (OJ L 96 29.03.2014 S. 309)	2014/34/EU ATEX Directive (OJ L 96 29.03.2014 S. 309)
EN IEC 60079-0:2019/AC:2020-02; EN 60079-5:2015; EN 60079-18:2015; EN 60079-31:2014	EN IEC 60079-0:2019/AC:2020-02; EN 60079-5:2015; EN 60079-18:2015; EN 60079-31:2014
EN 60598-3-1:2021	EN 60598-3-1:2021
EN 60598-3-2:2015/AC:2020-02; EN 60598-3-3:2015/AC:2020-02	EN 60598-3-2:2015/AC:2020-02; EN 60598-3-3:2015/AC:2020-02
2014/30/EU EMV-Richtlinie (ABl. L 96 29.03.2014 S. 79)	2014/30/EU Electromagnetic compatibility (OJ L 96 29.03.2014 S. 79)
2014/30/EU Directive (OJ L 96 29.03.2014 S. 79)	2014/30/EU Directive (OJ L 96 29.03.2014 S. 79)
EN IEC 55015:2019/A11:2020	EN IEC 55015:2019/A11:2020
EN 61000-3-2:2019/A1:2021-04	EN 61000-3-2:2019/A1:2021-04
2011/65/EU RoHS-Richtlinie (ABl. L 174 01.07.2011 S. 88)	2011/65/EU RoHS-Directive (OJ L 174 01.07.2011 S. 88)
2011/65/EU Directive (OJ L 174 01.07.2011 S. 88)	2011/65/EU Directive (OJ L 174 01.07.2011 S. 88)
EN IEC 63000:2018	EN IEC 63000:2018

Hiermit erklären wir in alleiniger Verantwortung, dass das oben aufgeführte Produkt mit den Anforderungen der angegebenen Richtlinien und Normen übereinstimmt.
We hereby declare in our sole responsibility that the product above complies with the requirements of the specified directives and standards.
Nous déclarons de notre seule responsabilité que le produit mentionné ci-dessus est conforme aux exigences des directives et des normes indiquées.

Adolf Schuch GmbH - Mainzer Str. 172, 67547 Worms, GERMANY

17.02.2022
Olaf Damm
Place and date
Lieu et date

ippa Prof. Dr. Bruno Weis
Technischer Leiter
Technical Director
Directeur de technique

IBEXU 16 ATEX 1008-05 Teil/part/parts A/58-02



EU-Konformitätserklärung
EU-Declaration of Conformity
Déclaration UE de Conformité

e 865...L...ZB, e 865...L...-1, e 865...L...-C	Explosionsgeschützte Leuchte Luminaire anti-éclabouillant
IBEXU 16 ATEX 1008	IBEXU 16 ATEX 1008 Leuchte (Schuch, GmbH) (0837)
2014/34/EU ATEX-Richtlinie (ABl. L 96 29.03.2014 S. 309)	2014/34/EU ATEX Directive (OJ L 96 29.03.2014 S. 309)
2014/34/EU ATEX Directive (OJ L 96 29.03.2014 S. 309)	2014/34/EU ATEX Directive (OJ L 96 29.03.2014 S. 309)
EN IEC 60079-0:2019/AC:2020-02; EN 60079-5:2015; EN 60079-18:2015; EN 60079-31:2014	EN IEC 60079-0:2019/AC:2020-02; EN 60079-5:2015; EN 60079-18:2015; EN 60079-31:2014
EN 60598-3-1:2021	EN 60598-3-1:2021
EN 60598-3-2:2015/AC:2020-02; EN 60598-3-3:2015/AC:2020-02	EN 60598-3-2:2015/AC:2020-02; EN 60598-3-3:2015/AC:2020-02
2014/30/EU EMV-Richtlinie (ABl. L 96 29.03.2014 S. 79)	2014/30/EU Electromagnetic compatibility (OJ L 96 29.03.2014 S. 79)
2014/30/EU Directive (OJ L 96 29.03.2014 S. 79)	2014/30/EU Directive (OJ L 96 29.03.2014 S. 79)
EN IEC 55015:2019/A11:2020	EN IEC 55015:2019/A11:2020
EN 61000-3-2:2019/A1:2021-04	EN 61000-3-2:2019/A1:2021-04
2011/65/EU RoHS-Richtlinie (ABl. L 174 01.07.2011 S. 88)	2011/65/EU RoHS-Directive (OJ L 174 01.07.2011 S. 88)
2011/65/EU Directive (OJ L 174 01.07.2011 S. 88)	2011/65/EU Directive (OJ L 174 01.07.2011 S. 88)
EN IEC 63000:2018	EN IEC 63000:2018

Hiermit erklären wir in alleiniger Verantwortung, dass das oben aufgeführte Produkt mit den Anforderungen der angegebenen Richtlinien und Normen übereinstimmt.
We hereby declare in our sole responsibility that the product above complies with the requirements of the specified directives and standards.
Nous déclarons de notre seule responsabilité que le produit mentionné ci-dessus est conforme aux exigences des directives et des normes indiquées.

Adolf Schuch GmbH - Mainzer Str. 172, 67547 Worms, GERMANY

17.02.2022
Olaf Damm
Place and date
Lieu et date

ippa Prof. Dr. Bruno Weis
Technischer Leiter
Technical Director
Directeur de technique

IBEXU 16 ATEX 1008-06 Teil/part/parts B/58-02

The test certificates are ready to be loaded down from our homepage - www.schuch.de - or we shall send it on request.

Misprints, modifications and errors are accepted